



Instructions 说明书



Baby Growth accompanied with curiosity and imagination!

Model: TM322/TM323/TM324 FEB301HYL74-105-X

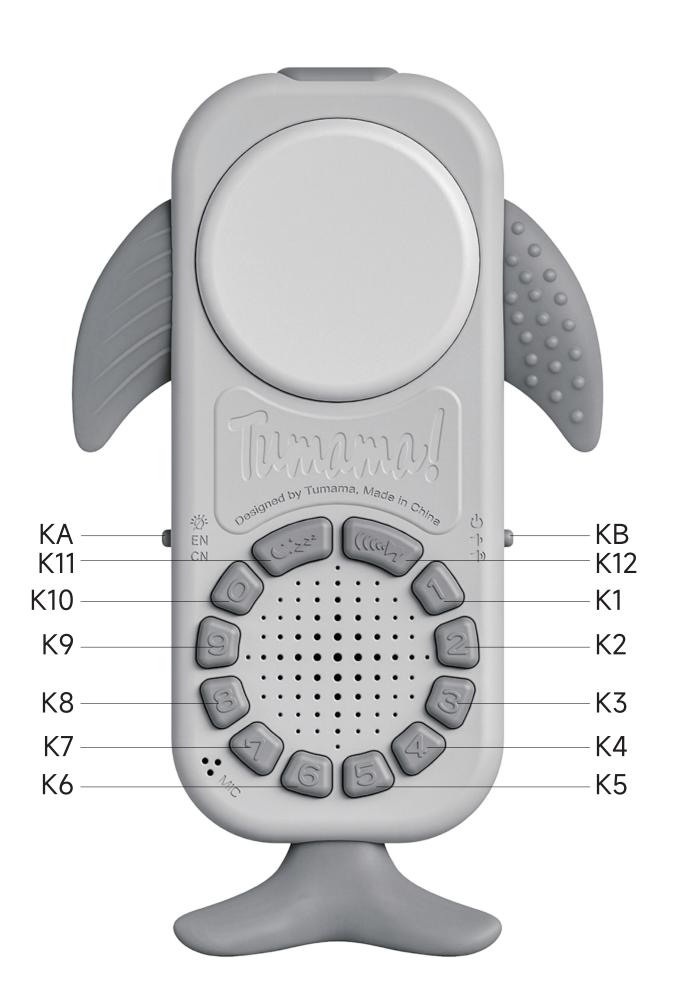

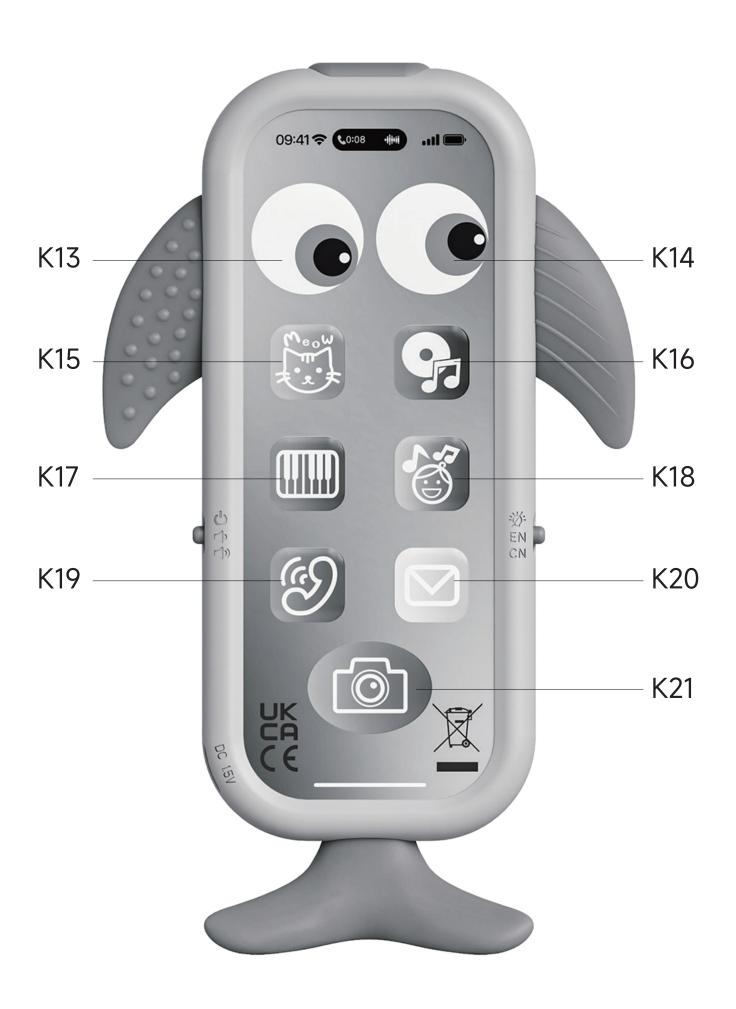

Charging Instructions 充电说明

充满:绿灯常亮

充电中,产品不可使用。



English

KA

Up: Turn off the lights

Mid: English Down: Chinese

KB

Up: Shut down Mid: Low volume Down: High volume

K1-10

Play in Chinese mode: Chinese digital Play in English mode: English digital

K11

Sleep mode

Short press: Next song

Long press: Pause and enter standby state. Press again

to resume play.

K12

Record / Play

K13/K14

Effects sound

K15-K18

Music

K19

Mobile Ringtones

K20

SMS tone

K21

Camera sound effectsvv

Standby function
Without any play or key operation, the lights are turned off after 5 minutes, and press any key to be activated. After another 25 minutes without any key operation, it will automatically shut down (Before restart it, you must switch KB-key to shut down key, and then turn it on again).



WARNING

Package is not toy, please keep it

away from children!

 Children play must be under the supervision of adults, adults take out toys from package and complete installation!

 To avoid accidental swallowing or asphyxiation, please do not allow children to play with toys that is

breaking apart!

• Keep away from fire!

Battery Precautions

 The product uses a non-replaceable 3.7V lithium battery;

 The rechargeable battery must be charged under the adults' supervision;

 When charging the rechargeable battery, the toy switch should be turned off;

 Power terminals shall not be short circuited;

It shall not be connected to more than the recommended number of

power supplies;

During using the USB, the cable, plug, housing and other parts shall be checked regularly to see if they are damaged. If they are damaged, stop using until they are repaired.

Maintenance

 Wipe the surface with a soft dry cloth to keep the toys clean.

Avoid direct sunlight and keep away

from any heat sources.

 Do not collide with hard objects or attempt to disassemble the device.

Do not immerse the toy in water and avoid dampness.

中文

KA

上档: 关灯 中档:英文 下档:中文

KB

上档: 关机

中档: 开机音量小下档: 开机音量大

K1-10

中文模式下播放: 中文数字 英文模式下播放:英文数字

K11

睡眠模式

短按: 下一首 长按: 暂停播放, 进入待机状态。再按一下, 恢复播放。

K12

录音/播放

K13/K14

特效音

K15-K18

音乐

K19

手机铃声

K20

短信音

K21

相机音效

休眠

没有任何播放和按键操作,5分钟后关灯,任何按键激活。 再过25分钟没有任何按键操作,自动关机(重新开机必须将 三档按键切换到关机,再重新开机)。



警告

- ●包装部分不是玩具,请勿让儿童拿去 玩耍以免发生危险!
- ●玩具必须在成人的直接监护下使用, 并由成年人从包装内取出再交给儿童 使用!
- ●请勿让儿童玩耍解体,破损,变形的玩具,以免造成误吞,窒息等伤害事故!
- ●远离火源!

电池注意事项

●产品使用1个不可更换3.7V锂电池;

●充电电池必须在成人监护下充电;

●充电电池在充电时,玩具开关应关掉;

●电源端子不得短路;

●不能连接到多于推荐数量的电源上; USB线在使用过程过中,应定期检查其电线、插头、外壳和其他部件是否损坏, 发现损坏时应停止使用,直至修复完好。

维护与保养

- ●用柔软的干布擦拭表面,保持玩具的清洁。
- ●避免阳光直射,远离任何热源。
- ●不可与硬物相碰撞,或试图拆卸主机。
- ●不可把玩具浸在水中,并避免受潮。

有害物质声明

根据《电子电气有害物质限制使用管理办法》,以下列出了本 产品中有害物质或元素的名称及含量。

产品中有害物质的名称及含量

部件名称	有害物质					
	/ -	汞 (Hg)		六价铬 (CR(VI))		多溴二苯醚 (PBDE)
塑胶件	0	0	0	0	0	0
电路板组件	X	0	0	0	\circ	\circ
五金件	×	0	0	0	0	0

本表格依据SJ/T 11364 的规定编制。

〇:表示该有害物质在该物件所有材料中的含量均在 GB/T 26572规定的限量要求以下。

×: 表示该有害物质至少在该部件的某一均质材料中的 含量超出GB/T 26572 规定的限量要求。但上表中, 标有"×"的所有部件都符合欧盟RoHS法规"欧洲议 会和欧盟理事会2003年1月27日关于电子电气设备中 限制使用某些有毒有害物质的2002/95/EC号指令

注: 环保使用期限的参考标取决于产品正常

工作的温度和湿度等条件。