



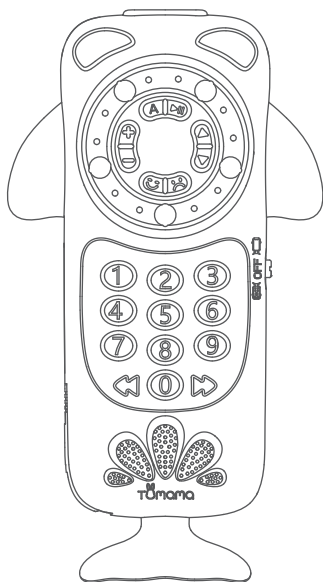


Instructions 说明书 取扱説明書



Model: TM141/TM143/TM179
Version: V1.5

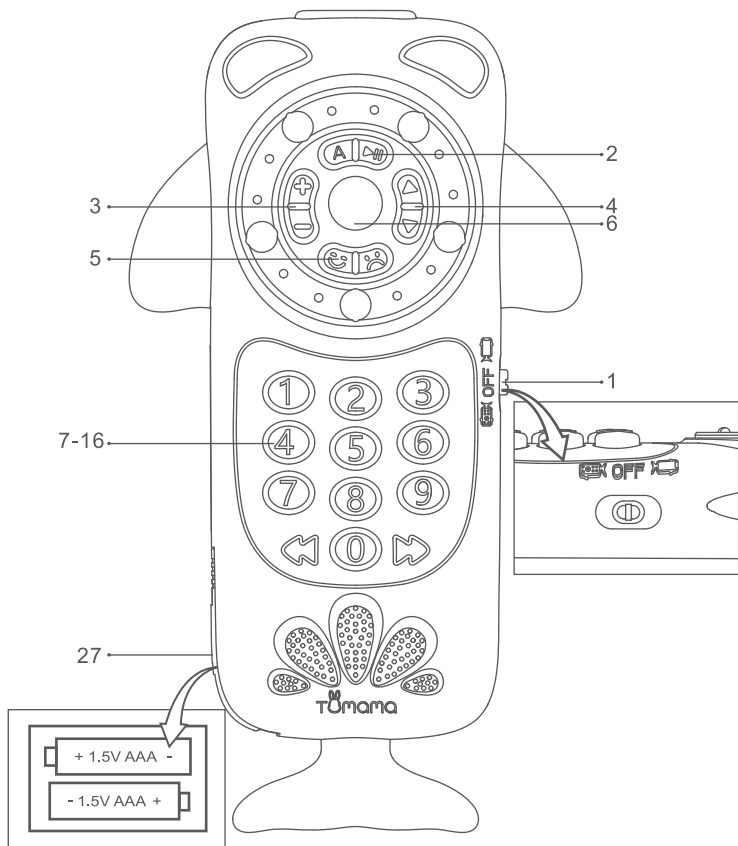

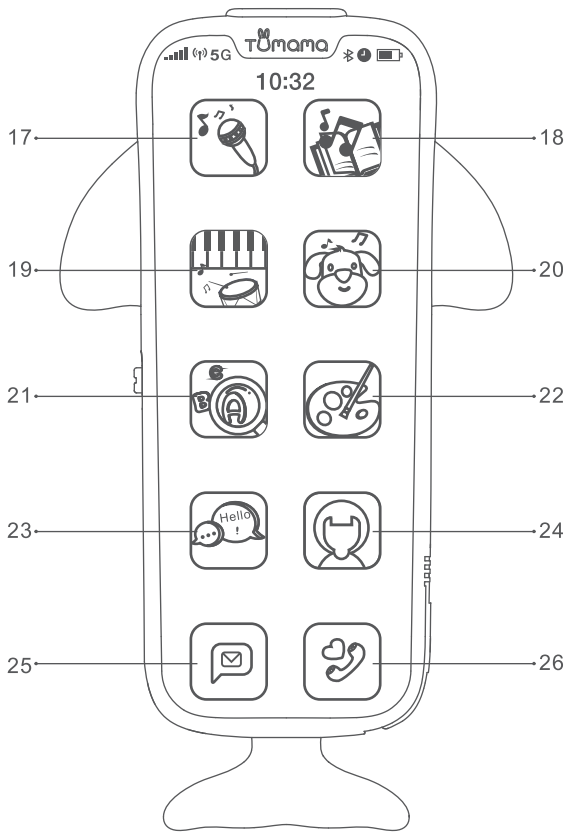

CONTENTS / 目录 / もくじ

English	4-7
中文	8-11
日本語	12-14

Remote Mode

1.Switch Key

Switch key : Up - Control the front page / Mid- Power off / Down - Control the back page.

2.Play / Pause

Press to play, again paused.

3.Volume

3 level volume : high- Mid- Low.

4.Next

Press to next one, 8 songs loop.

5.Recording

Press it to talk, then play the recording 3 times continuously.

6.Language Switching Key

Switch between Chinese and English modes, play "English mode" when switching to English, switch to Chinese play "Chinese mode".

7-16.Number Key

Play the corresponding number.

Phone Mode

17.Children's Songs

8 children's songs are played in order.

18.Story

4 english's story are played in order.

19.Piano + Drum

Played in order.

Do / Re / Mi / Fa / So / La / Si

Drum 1/ Drum 2/ Drum 3/ Drum 4

20.Animal

Played in order.

Dog sound / tiger sound / bird sound / duck sound / sheep sound /

pig sound / cat sound / chicken sound

21.Letters

Play in order.

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

22.Colors

Play in order.

Color / Red / Orange / Yellow / Green / Blue / Purple / Black / White

23.Greetings

Play in order.

Hello / Good morning / Good afternoon / Good night / How are you /

Have a nice day / See you later / Goodbye

24.Appellation

Play in order.

Dad / Mom / Grandpa / Grandma / Uncle / Auntie / Brother / Sister

25.Message

8 message effects,play in order.

26.Telephone Ring

8 rings,played in order.

27. Battery Installation Diagram

Battery installation method

1. Confirm that the toy's power is turned off.
2. Locate the battery cover on the bottom of the toy .
3. Load two new 1.5V "AAA" batteries as indicated in the battery compartment. (Recommended to use a new alkaline battery to get the best performance from the product).
4. Replace the battery cover .

Battery Notices

1. This product uses 2 1.5V "AAA" non-rechargeable batteries;
2. The battery should be taken out and loaded in accordance with the polarity and voltage signs on the toy battery box. The battery should not be short-circuited.
3. Non-rechargeable batteries cannot be charged;
4. Different types of batteries or old and new batteries cannot be mixed to use;
5. Only the same or equivalent battery as the recommended battery can be used;
6. The used battery should be taken out of the toy. If it is not used for a long time, please take out the battery in the toy;
7. The power terminals must not be short-circuited;
8. Cannot connect to more than the recommended number of power supplies.

Common Troubleshooting

If there is a sudden crash in the course of the game, please take the following steps to troubleshoot:

1. Turn off the device;
2. Take out the battery, shut down power supply;
3. Leave the device for a few minutes before reloading the battery;

4.Reset;

5.If you can't troubleshoot it, please try new batteries again.

Maintenance

1.Wipe the surface with a soft dry cloth to keep the toys clean.

2.Avoid direct sunlight and keep away from any heat sources.

3.Please take out the battery when you are not using it for a long time.

4.Do not collide with hard objects or attempt to disassemble the device.

5.Do not immerse the toy in water and avoid dampness.



Warning

- The package is not a toy, please do not let the baby play it, to avoid danger.
- The package must be unpacked by the adults, assembled by the adult, and the baby play toys under the supervision of the adults.
- Do not allow children to play with disintegrated, broken, deformed toys to avoid accidents, such as accidental swallowing and suffocation.
- Only the adults can install and replace the battery.

keep this instruction for future reference,as it contains important information.

遥控模式

1.切换键

切换键：上档:手机模式 / 中档: 关 / 下档: 遥控器模式。

2.播放/暂停

按下播放，再按一下暂停。

3.声音切换

三档音量默认中间档，中间-大-小，循环。

4.下一首切换

按一下播放下一首，8首循环。

5.录音

按住 说话，连续循环播放录音3次

6.语言切换键

中英文模式切换，切换到英文时播放“english mode”，切换到中文时播放“中文模式”。

7-16.数字键

播放相对应的数字。

手机模式

17.儿歌

8首儿歌按顺序播放。

18.故事

4个故事按顺序播放。

19. 琴+鼓

按顺序播放。

Do / Re / Mi / Fa / So / La / Si

鼓1 / 鼓2 / 鼓3 / 鼓4

20. 动物

按顺序播放。

狗叫声 / 老虎叫声 / 鸟叫声 / 鸭子叫声 / 羊叫声 / 猪叫声 / 猫叫声 / 鸡叫声

21. 字母

按顺序播放。

A B C D E F G H I J K L M N O P Q R S T U V W X
Y Z

22. 颜色

按顺序播放。

红色 / 橙色 / 黄色 / 绿色 / 蓝色 / 紫色 / 黑色 / 白色

23. 问候语

按顺序播放。

你好 / 早上好 / 下午好 / 晚安 / 你好吗 / 拥有快乐的一天 / 回头见 / 再见

24. 称呼

按顺序播放。

爸爸 / 妈妈 / 爷爷 / 奶奶 / 叔叔 / 阿姨 / 哥哥 / 姐姐

25. 短信

8首短信声效，按顺序播放。

26. 电话铃声

8首电话铃声，按顺序播放。

27. 电池安装示意图

电池安装方法

1. 确认已关闭玩具的电源。
2. 在玩具底部找到电池盖。
3. 按照电池盒内的指示装入2个新的1.5V“AAA”电池。
(建议使用新的碱性电池以便发挥产品的最佳性能)
4. 重新盖上电池盖。

电池注意事项

1. 产品使用2节1.5V“AAA”非充电电池；
2. 电池取出和装入应按玩具电池盒上的极性和电压标志进行正确操作，电池不应短路；
3. 非充电电池不能充电；
4. 不同类型的电池或新旧电池不能混用；
5. 只有和推荐电池相同或者等效的电池方可使用；
6. 用尽的电池应从玩具中取出，若长期不使用，请将玩具中电池取出；
7. 电源端子不得短路；
8. 不能连接到多于推荐数量的电源上。

常见故障排除

如在游戏的过程中突然出现死机现象，请按以下步骤排除故障：

1. 关闭主机；
2. 取出电池，中断电源；
3. 将主机放置数分钟，再重新装入电池；
4. 重新开机；
5. 如果还不能排除故障，请更换新的电池，再尝试。

维护与保养

1. 用柔软的干布擦拭表面，保持玩具的清洁。
2. 避免阳光直射，远离任何热源。
3. 当长时间不用时，请将电池取出。
4. 不可与硬物相碰撞，或试图拆卸主机。
5. 不可把玩具浸在水中，并避免受潮。



警告

- 包装部分不是玩具，请不要让婴幼儿拿去玩耍以免发生危险。
- 必须由成年人拆开包装，并由成年人组装及监护下使用。
- 请勿让小孩玩耍解体，破损，变形玩具，以免造成误吞，窒息等伤害事故。
- 电池的安裝及更換仅供成年人操作。

本说明书包含主要信息，请妥善保管以备日后查看。

リモコンモード

1.切り替えキー

切り替えキー：上ランク：携帯モード / 中ランク：オフ / 下ランク：リモコンモード。

2.開始/中止

押すと放送開始、再度押すと中止になる。

3.音声切替

三つのランクは中ランクがはじめの設定で、押すと中→大→小、循環の順になる。

4.次の曲に切り替える

一回押すと次の曲になる。8曲が循環する。

5.録音

話を押さえながら、録音を3回繰り返し再生します。

6.言語切り替えキー

漢英モードを切り替えます。英語を切り替える場合、「english mode」を再送して、中国語を切り替える場合、「中国語モード」を再生します。

7-16.数字キー

対応する数字を再生する。

スマホモード

17.童謡

8首の童謡を順序に再生します。

18.ストーリー

4つのストーリーを順序に再生します。

19.琴+ドラム

順序に再生します。

Do / Re / Mi / Fa / So / La / Si 鼓1 / 鼓2 / 鼓3 / 鼓4

20.動物

順序に再生します。

犬の声 / 虎の声 / 鳥の声 / 鴨の声 / 羊の声 / 豚の声 / 猫の声 / 鶏の声

21. アルファベット

順序に再生します。

22.カラー

順序に再生します。

Red / Orange / Yellow / Green / Blue / Purple / Black / White

23.挨拶

順序に再生します。

Hello / Good morning / Good afternoon / Good night /
How do you do / Have a good day / See you late / Good bay

24.称呼

順序に再生します。

Dad / Mom / Grandpa / Grandma / Uncle / Aunt / Brother / Sister

25.メービーベル

8曲のメービーベルの特効音が順番。

26.電話のベル

8曲の電話のベルが順番に放送放送されています。

27.電池取付図

バッテリーの取り付け方

- 1.玩具の電源がオフと確認してください。
- 2.玩具の底に電池ケースを探して、ボルトを取り外してください。
- 3.指示通り2個の1.5V「AAA」電池をいれてください。（最高機能を表せるた

めに、新しい電池を勧めます)

4. ボルトを締めてください。

バッテリー注意事項

1. 製品は1.5 V「AAA」非充電電池を2本使用します；
2. 電池の取り出しと取り付けはおもちゃの電池ボックスの極性と電圧標識に従って、正しく操作してください。電池はショートしてはいけません；
3. 非充電電池は充電できません；
4. 異なるタイプの電池や新旧の電池は混用してはいけません；
5. おすすめの電池と同じまたは同等の電池のみを使用してください；
6. 使い尽くした電池はおもちゃから取り出してください。長期間使用しない場合はおもちゃの電池を取り出してください；
7. 電源端子はショートしてはいけません；
8. お勧めの数以上の電源に接続することはできません。

故障判断

もし、ゲーム中、ハングアップだったら、以下のステップで解決してください：

1. 本体の電源をオフしてください；
2. バッテリーを取り外してください；
3. 数分間後、バッテリーをいれてください；
4. スタートしてくださいリセット；
5. もし問題を解決しないと、新しいバッテリーを交換してみてください。

メンテナンス

1. 柔軟の布で表面を拭いて、清潔を確保します。
2. 直射日光と熱源を離れてください。
3. 長時間お使わないと、電池を取り出してください。
4. 硬いものとの衝突とか、分解とかは禁止です。
5. 水中にいれないで下さい。

警告

- 包装部分は玩具ではないので、危険が発生させないように、遊ぶことは禁止です。
- 必ず大人が包装を分解してください。また、大人が組み立てから、監視している状態で使用してください。
- 子供はおもちゃを解体、破損、変形してはいけません。呑む、窒息等の危険が起きますから。
- 電池の取付や交換は大人のみです。

本取扱説明書は非常に重要で、適当に保管してください。



Baby growth accompanied with curiosity and imagination!

让好奇心和想象力伴随着宝宝成长！

赤ちゃんの成長に好奇心と想像力を伴います！

E-mail : info@tumama-kids.com

Web : www.tumama-kids.com

Dealer : Tumama Kids Care (Shenzhen) Company Limited

制造商：小兔母婴（深圳）有限公司

メーカー：小兔母婴（深圳）有限会社

All rights reserved