







Instructions 说明书 取扱説明書


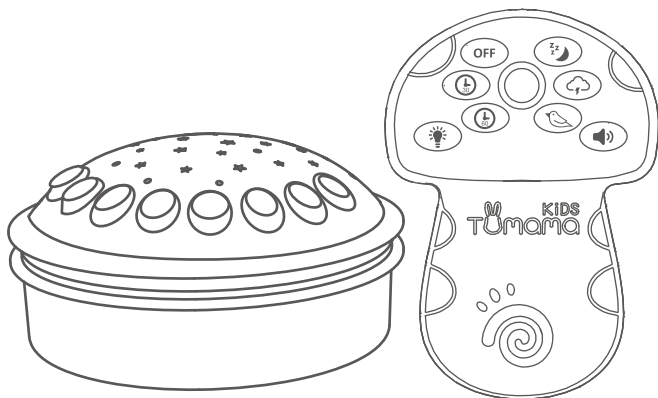


Model:TM199
Version:V1.7

CONTENTS / 目录 / もくじ

English	4-7
中文	8-11
日本語	12-14

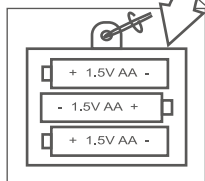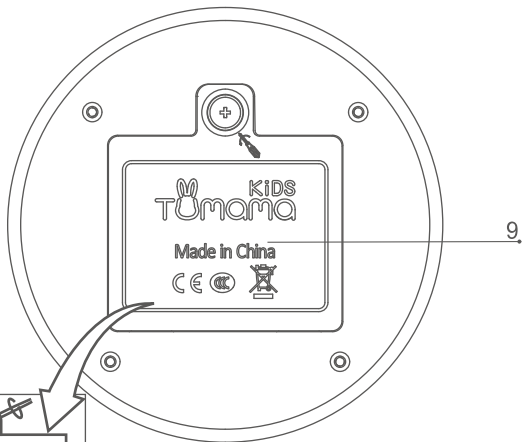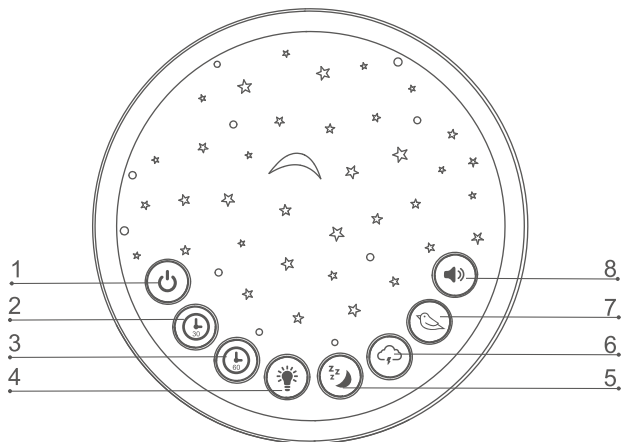

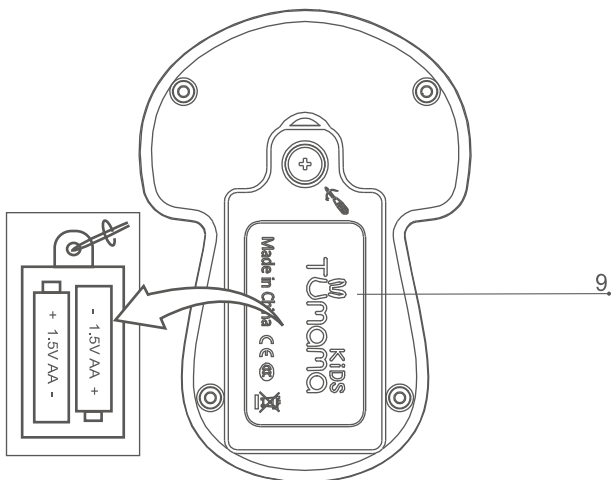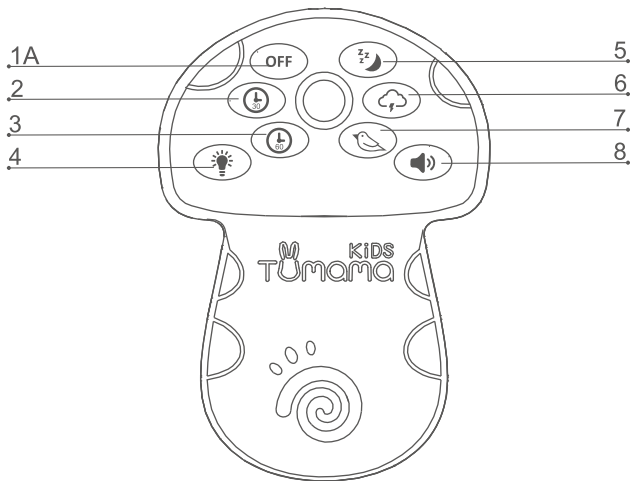

English



1.Power

Press it to turn on, and press it again to turn off.



1A.OFF

Press it to turn off.



2.Timer (30 minutes)

Press once, it will automatically shut down after 30 minutes, and then press it again, the device will play "off" to turn off the timer.



3.Timer (60 minutes)

Press once, it will automatically shut down after 60 minutes, and then press it again, the device will play "off" to turn off the timer.



4. Lighting Mode

Mode 1: Loop colorful slowly

Mode 2: Light flashes green

Mode 3: Light flashes red

Mode 4: Light flashes blue

Mode 5: Turn off the lights

modes cycle switching



5. Sleeping songs

8 sleeping songs



6. Natural sounds

8 natural sounds



7. Animals sounds

8 Animals sounds



8. Volume Control

Level 1 : Volume 85%

Level 2 : Volume 60%

Level 3 : Volume 30%

Level 4 : Mute

Level 5 : Volume 100%

9. Battery installation

Battery installation

1. Turn off the toy.
2. Use the screwdriver to open the battery cover on the bottom of the toy.
3. Insert 3 x 1.5V AA batteries into the toy, and 2 X 1.5 AA batteries into the remote control .(Recommend new batteries).
4. Tighten the battery cover.

Notes

1. The toy use 3 x 1.5 V AA non-rechargeable batteries, The remote control use 2 x 1.5V AA non-rechargeable batteries;
2. Install the batteries according to the right polarity and voltage signs, the battery should not be short-circuited;
3. Non-rechargeable batteries
4. Different types of batteries or old and new batteries cannot be mixed;

5. Only the same or equivalent battery as the recommended battery can be used.
6. The exhausted battery should be removed from the toy. If it is not used for a long time, please remove the battery from the toy;
7. Power terminals must not be short-circuited;
8. Do not connect to more than the recommended number of power sources.

Common troubleshooting

If the toy can not work properly, follow these steps to troubleshoot:

1. Turn off the toy;
2. Remove the battery;
3. After several minutes, and then reinstall the battery;
4. Turn on the toy again;
5. If the problem cannot be solved, please replace the new batteries and try again.

Maintenance

1. Wipe the surface with a soft and dry cloth to keep the toy clean.
2. Avoid direct sunlight and keep away from any heat source.
3. When the toy is not used for a long time, please remove the battery.
4. Do not collide with hard objects or try to disassemble the toy.
5. Do not immerse toys in water and avoid getting wet.

No button was operated within 45 minutes, then it will turn off automatically

This user manual contains the important information, please keep it for future reference.

中文



1. 开关键

按一下开机，再按一下关机。



1A. OFF

按一下关机。



2. 定时关机（30分钟）

按一下，30分钟后自动关机，再按一下播放“off”，关闭定时。



3. 定时关机（60分钟）

按一下，60分钟后自动关机，再按一下播放“off”，关闭定时。



4.灯光模式

模式1: 多彩慢速循环

模式2: 灯光闪绿色

模式3: 灯光闪红色

模式4: 灯光闪蓝色

模式5: 关灯

5档模式循环切换



5.睡眠曲

8首催眠曲目按顺序播放



6.大自然

8首大自然声音按顺序播放



7.动物

8首动物声音按顺序播放



8.音量

- 第1档：音量85%
- 第2档：音量60%
- 第3档：音量30%
- 第4档：静音
- 第5档：音量100%

9.电池仓

电池安装方法

1. 确认已关闭玩具的电源。
2. 在玩具底部找到电池盖，用螺丝刀把螺丝拧松。
3. 按照电池室内的指示，投影灯装入3个新的1.5V“AA”电池，遥控器装入2个新的1.5V“AA”电池。（建议使用新的碱性电池以便发挥产品的最佳性能）
4. 重新盖上电池盖并拧紧螺丝。

电池注意事项

1. 投影灯使用3节1.5V“AA”非充电电池，遥控器使用2节1.5V“AA”非充电电池；
2. 电池取出和装入应按玩具电池室上的极性和电压标志进行正确操作，电池不应短路；
3. 非充电电池不能充电；
4. 不同类型的电池或新旧电池不能混用；
5. 只有和推荐电池相同或者等效的电池方可使用；

6. 用尽的电池应从玩具中取出，若长期不使用，请将玩具中电池取出；
7. 电源端子不得短路；
8. 不能连接到多于推荐数量的电源上。

常见故障排除

如在游戏的过程中突然出现死机现象，请按以下步骤排除故障：

1. 关闭主机；
2. 取出电池，中断电源；
3. 将主机放置数分钟，再重新装入电池；
4. 重新开机；
5. 如果还不能排除故障，请更换新的电池，再尝试。

维护与保养

1. 用柔软的干布擦拭表面，保持玩具的清洁。
2. 避免阳光直射，远离任何热源。
3. 当长时间不用时，请将电池取出。
4. 不可与硬物相碰撞，或试图拆卸主机。
5. 不可把玩具浸在水中，并避免受潮。

45分钟没有操作任何按键，播放休眠音后关机。

本说明书包含主要信息，请妥善保管以备日后查看。

日本語



1.スイッチ

一回押すと、起動して、もう一回押すと、シャットダウンします。



1A.OFF

一回押すと、シャットダウンします。



2.タイミングパワーオフ（30分）

一回押すと、30分後にパワーオフになります，もう一回押すとタイムモードをオフにし、同時にオフになります。



3.タイミングパワーオフ（60分）

一回押すと、60分後にパワーオフになります，もう一回押すとタイムモードをオフにし、同時にオフになります。



4.ライトモード

モード1：カラーで遅くてサイクルされます

モード2：緑のライトが点灯

モード3：赤のライトが点灯
モード4：青のライトが点灯
モード5：消灯
5つモードがサイクル切り替えられます



5.子守歌

8曲の子守歌が順序に再生されます



6.大自然

8曲の大自然の音が順序に再生されます。



7.動物

8曲の動物の音が順序に再生されます



8.ボリューム

第1段：85%
第2段：60%
第3段：30%
第4段：マナーモード
第5段：100%

9. バッテリーのボックス

バッテリーの取り付け方

1. 玩具の電源がオフと確認してください。
2. 玩具の底に電池ケースを探して、ボルトを取り外してください。
3. 投影灯が3本の1.5V「AA」の乾電池を使います。リモコンは2本の1.5V「AA」の乾電池を使います。（最高機能を表せるために、新しい電池を勧めます）
4. ボルトを締めてください。

バッテリー注意事項

1. 投影灯が3本の1.5V「AA」の乾電池を使います。リモコンは2本の1.5V「AA」の乾電池を使います；
2. 電池の取り出しと取り付けはおもちゃの電池ボックスの極性と電圧標識に従って、正しく操作してください。電池はショートしてはいけません；
3. 非充電電池は充電できません；
4. 異なるタイプの電池や新旧の電池は混用してはいけません；
5. おすすめの電池と同じまたは同等の電池のみを使用してください；
6. 使い尽くした電池はおもちゃから取り出してください。長期間使用しない場合はおもちゃの電池を取り出してください；
7. 電源端子はショートしてはいけません；
8. お勧めの数以上の電源に接続することはできません。

故障判断

もし、ゲーム中、ハングアップだったら、以下のステップで解決してください：

1. 本体の電源をオフしてください；
2. バッテリーを取り外してください；
3. 数分間後、バッテリーをいれてください；
4. スタートしてくださいリセット；
5. もし問題を解決しないと、新しいバッテリーを交換してみてください。

メンテナンス

1. 柔軟の布で表面を拭いて、清潔を確保します。
2. 直射日光と熱源を離れてください。
3. 長時間お使わないと、電池を取り出してください。
4. 硬いものとの衝突とか、分解とかは禁止です。
5. 水中にいれないで下さい。

45分以内に何かの操作がなければ、休止音を再生されてからパワーオフになります。

本取扱説明書は非常に重要で、適当に保管してください。



Baby growth accompanied with curiosity and imagination!

让好奇心和想象力伴随着宝宝成长!

赤ちゃんの成長に好奇心と想像力を伴います!

E-mail : info@tumama-kids.com

Web : www.tumama-kids.com

Dealer : Tumama Kids Care (Shenzhen) Company Limited

制造商：小兔母婴（深圳）有限公司

メーカー：小兔母婴（深圳）有限会社

All rights reserved